

RECOMMENDED USE OF CENTERING GUIDES
(OAR 690-210-0240)

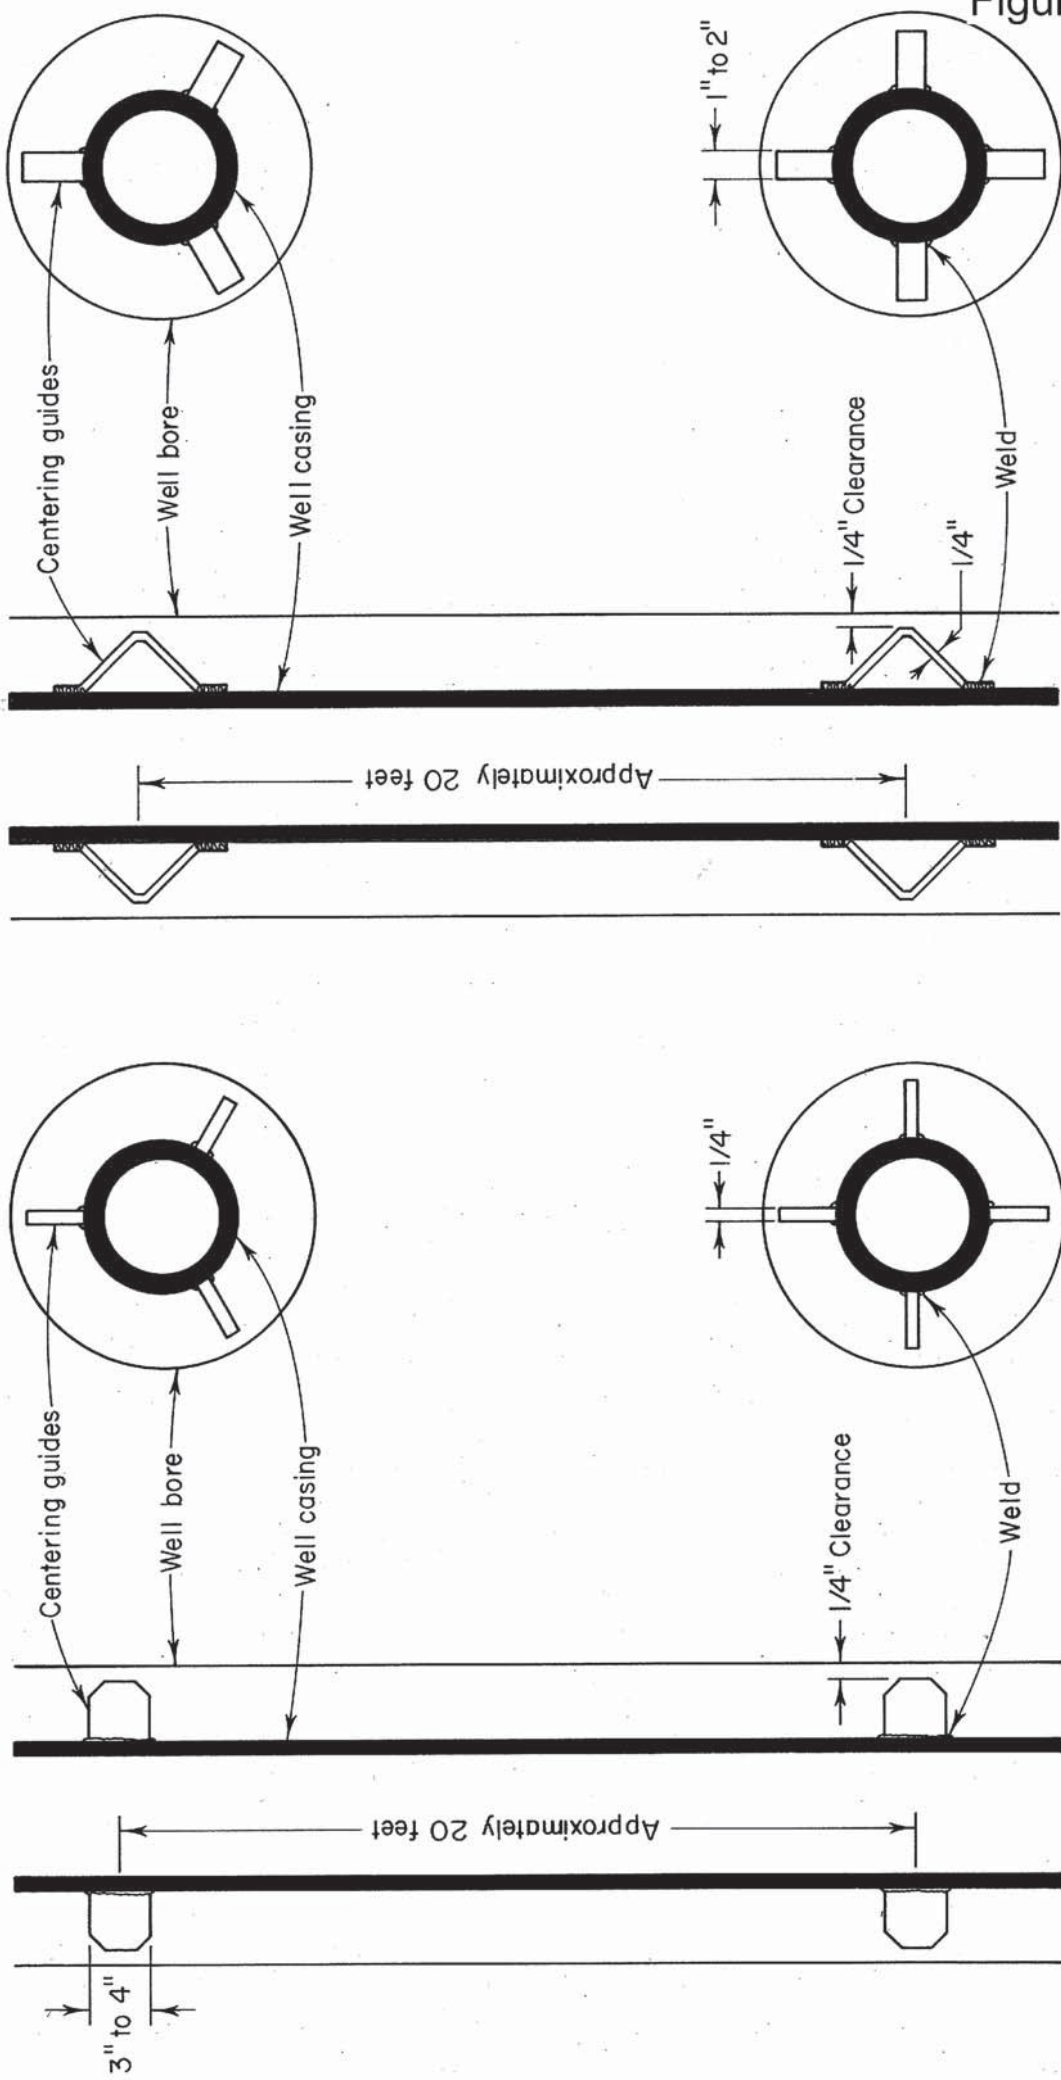


Figure 210-11

NOTE: Well casing, to be sealed into an oversize drillhole, should be equipped with a series of centering guides to insure proper centering of casing. Guides should be evenly spaced in groups of 3 or 4, and attached to the casing.