


ABANDONMENT OF CASED WELLS (OAR 690-220-0040)

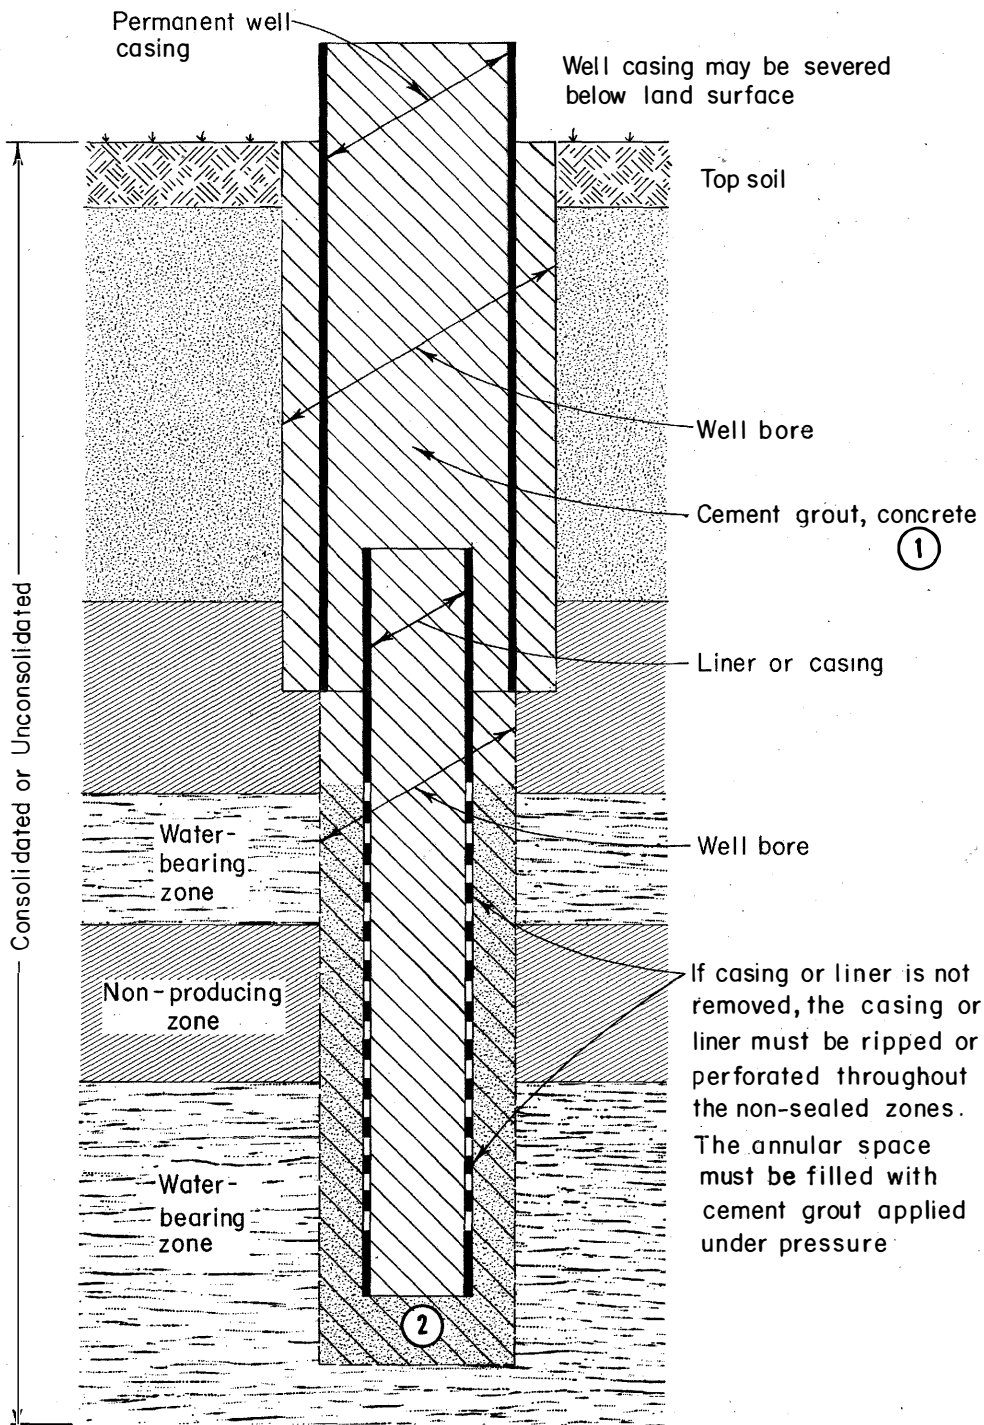

- ① In all wells to be abandoned, cement grout and concrete must be placed by grout pipe, tremie or dump bailer.
- ② In all wells to be abandoned, sealing material must be introduced at the bottom of the well and placed progressively upward.