


# Abandonment of Uncased Wells in Unconsolidated Formations (OAR 690-220-0050)


Figure 220-1

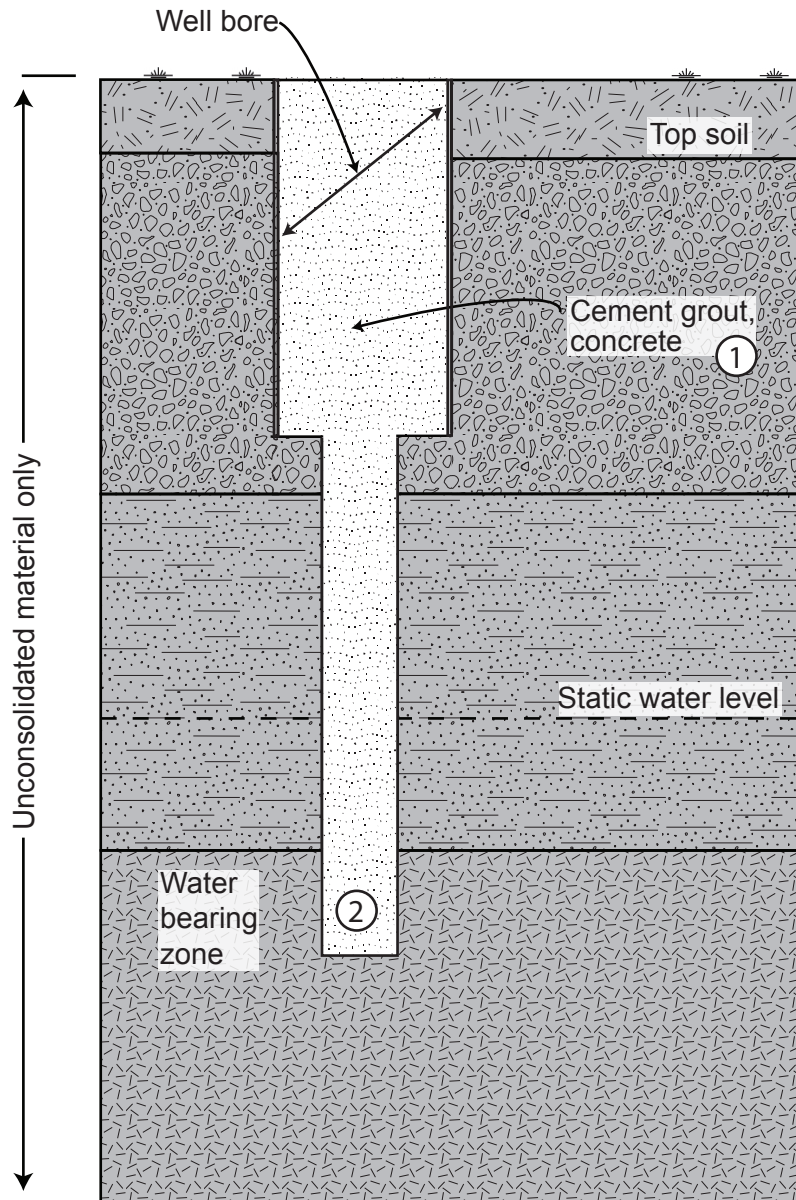

- ① In all wells to be abandoned, cement grout and concrete must be placed by grout pipe, tremie, or dump bailer.
- ② In all wells to be abandoned, sealing material must be introduced at the bottom of the well and placed progressively upward.

# ABANDONMENT OF UNCASED WELLS IN CONSOLIDATED FORMATIONS

(OAR 690-220-0050)

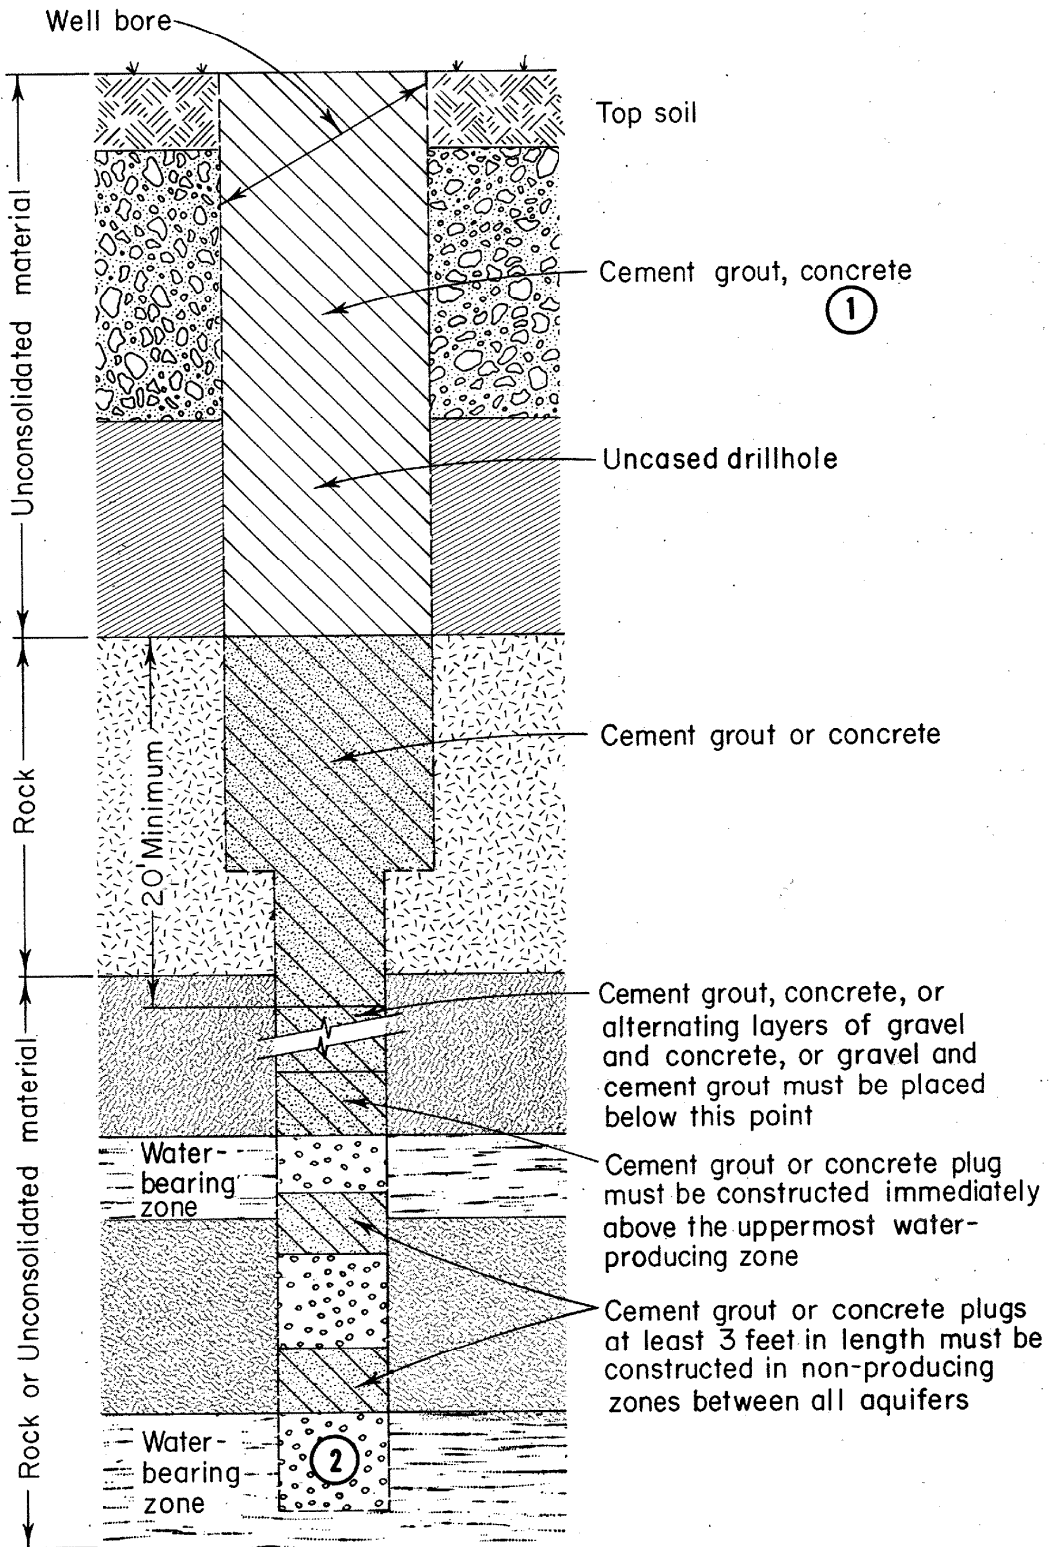

① In all wells to be abandoned, cement grout and concrete must be placed by grout pipe, tremie, or dump bailer.

② In all wells to be abandoned, sealing material must be introduced at the bottom of the well and placed progressively upward.